

POLYGONBIKES.COM




CONGRATULATIONSI

Congratulations for buying Polygon Bikes! A bicycle is a great tool for transportation and recreation. Hopefully, you can find enjoyment and have a great deal of use in every ride. This manual contains important information which includes safety, performance, and maintenance.

IMPORTANT

Read this manual before taking your first ride and use it for future reference as well.

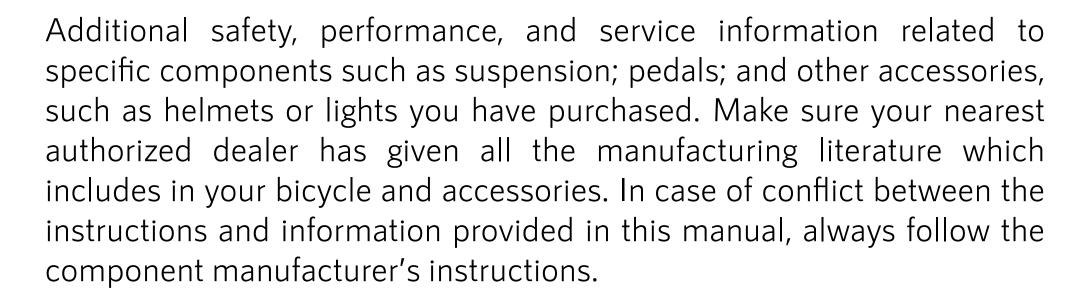

If you have any questions or do not understand something within this guide, take responsibility for your safety and consult with your nearest authorized dealer or the bicycle's manufacturer.



NOTE

This manual is not intended for comprehensive use, service repair, or service manual. Please see your nearest authorized dealer for all service, repairs, and maintenance-related action. Your dealer is also able to refer you to classes, clinics, or books for service or maintenance.

WARNING

To ensure the warranty of your bicycle, be sure to only use the original spare parts.

01 / Introduction Manual Guide






CONTENT

O1 INTRODUCTION	O7 PEDELEC/ASSIST SUPPORT WALK MODE
O2 TABLE OF CONTENT	AUTOMATIC SMART LAMP
O3 BIKE ELEMENTS	O8 BATTERY INSTALLATION BATTERY REMOVAL
O4 CABLE ROUTING	09 CHARGING THE BATTERY
05 E-BIKE PARTS	
O6 DISPLAY TURN ON/OFF THE SYST	10 BATTERY LED INDICATOR ΓΕΜ






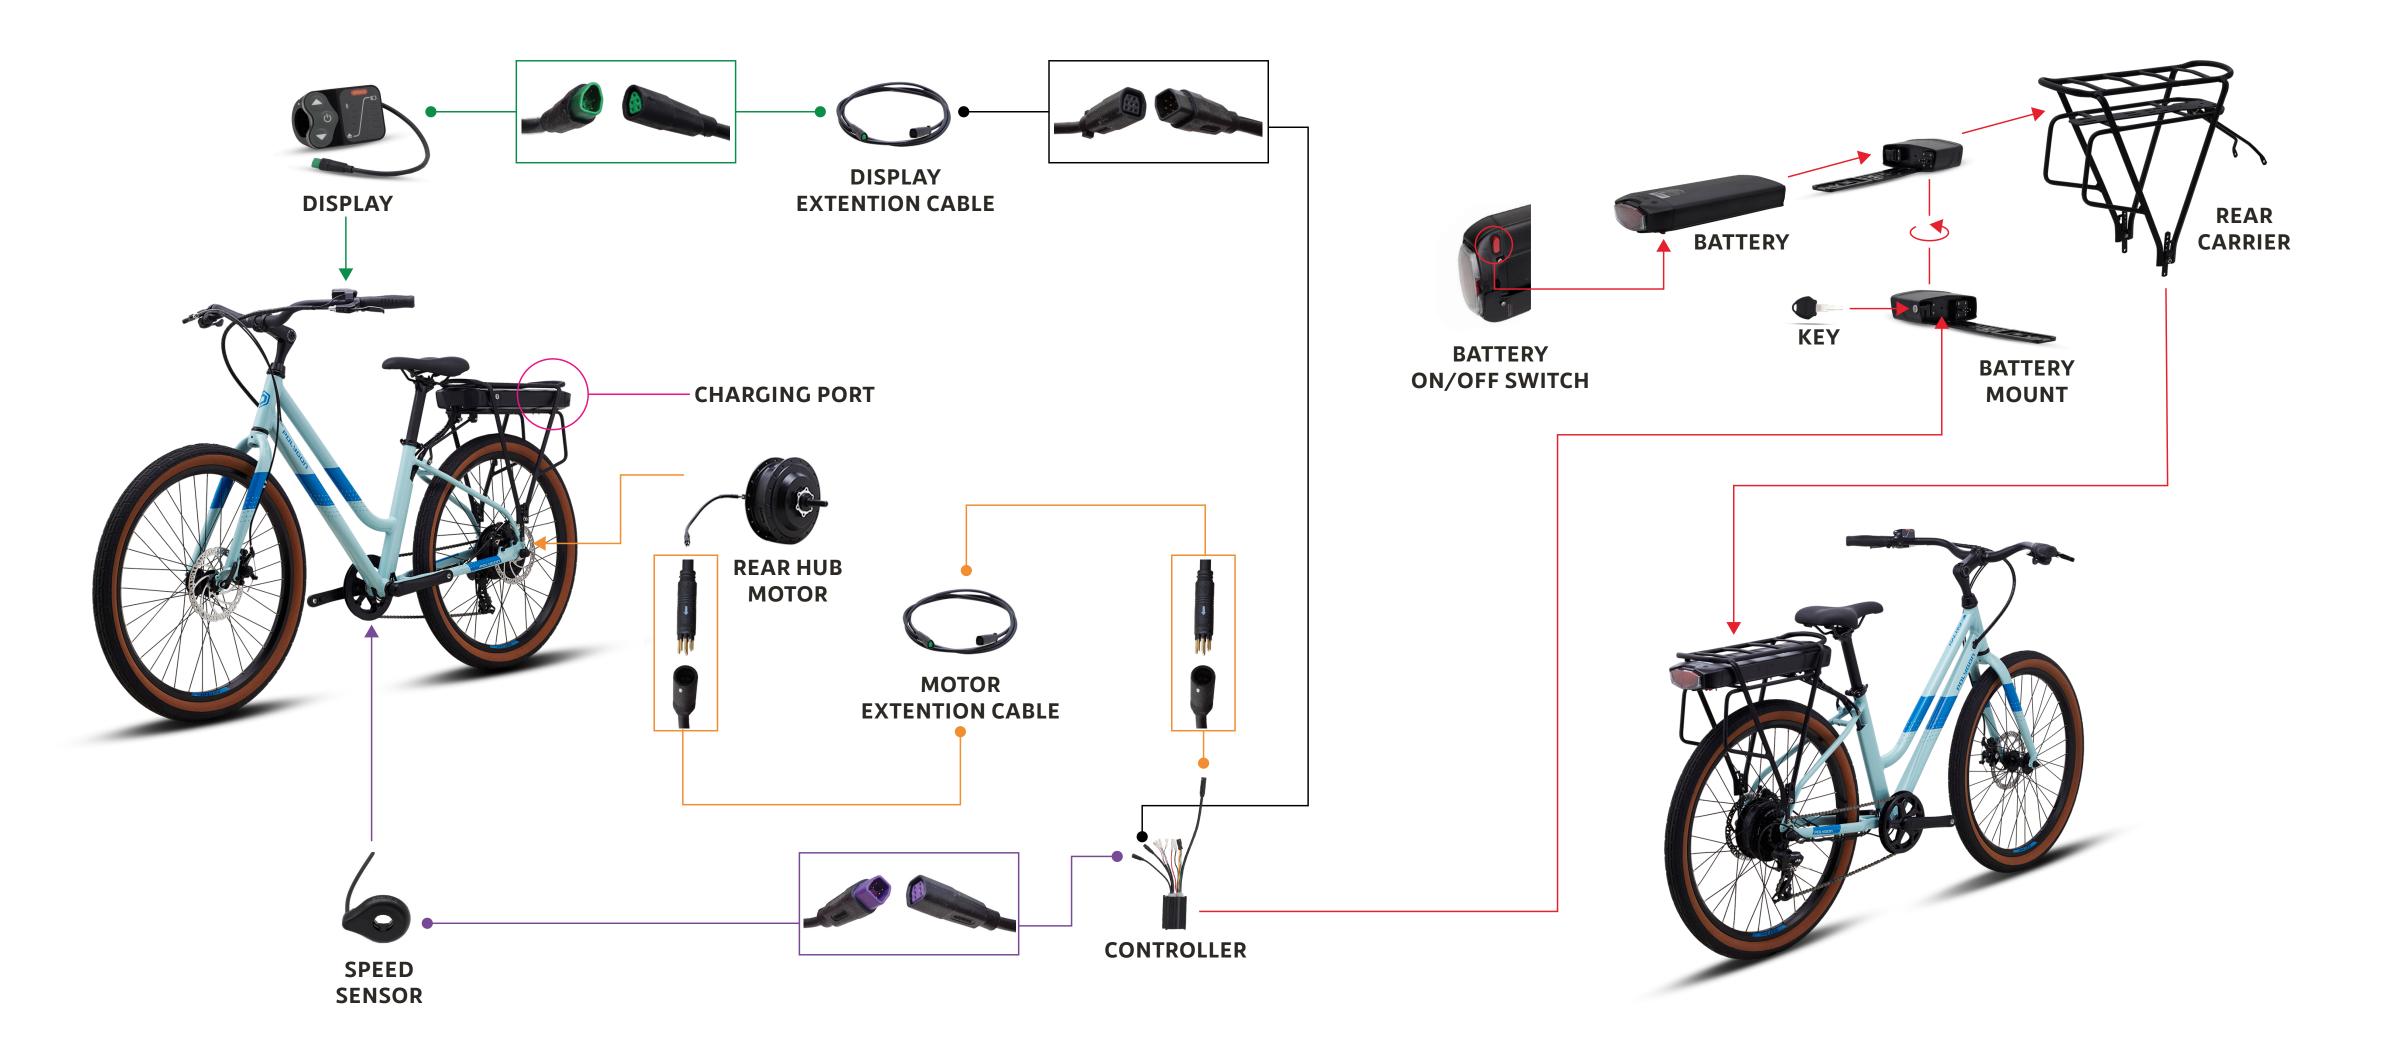

03 / Bike Elements





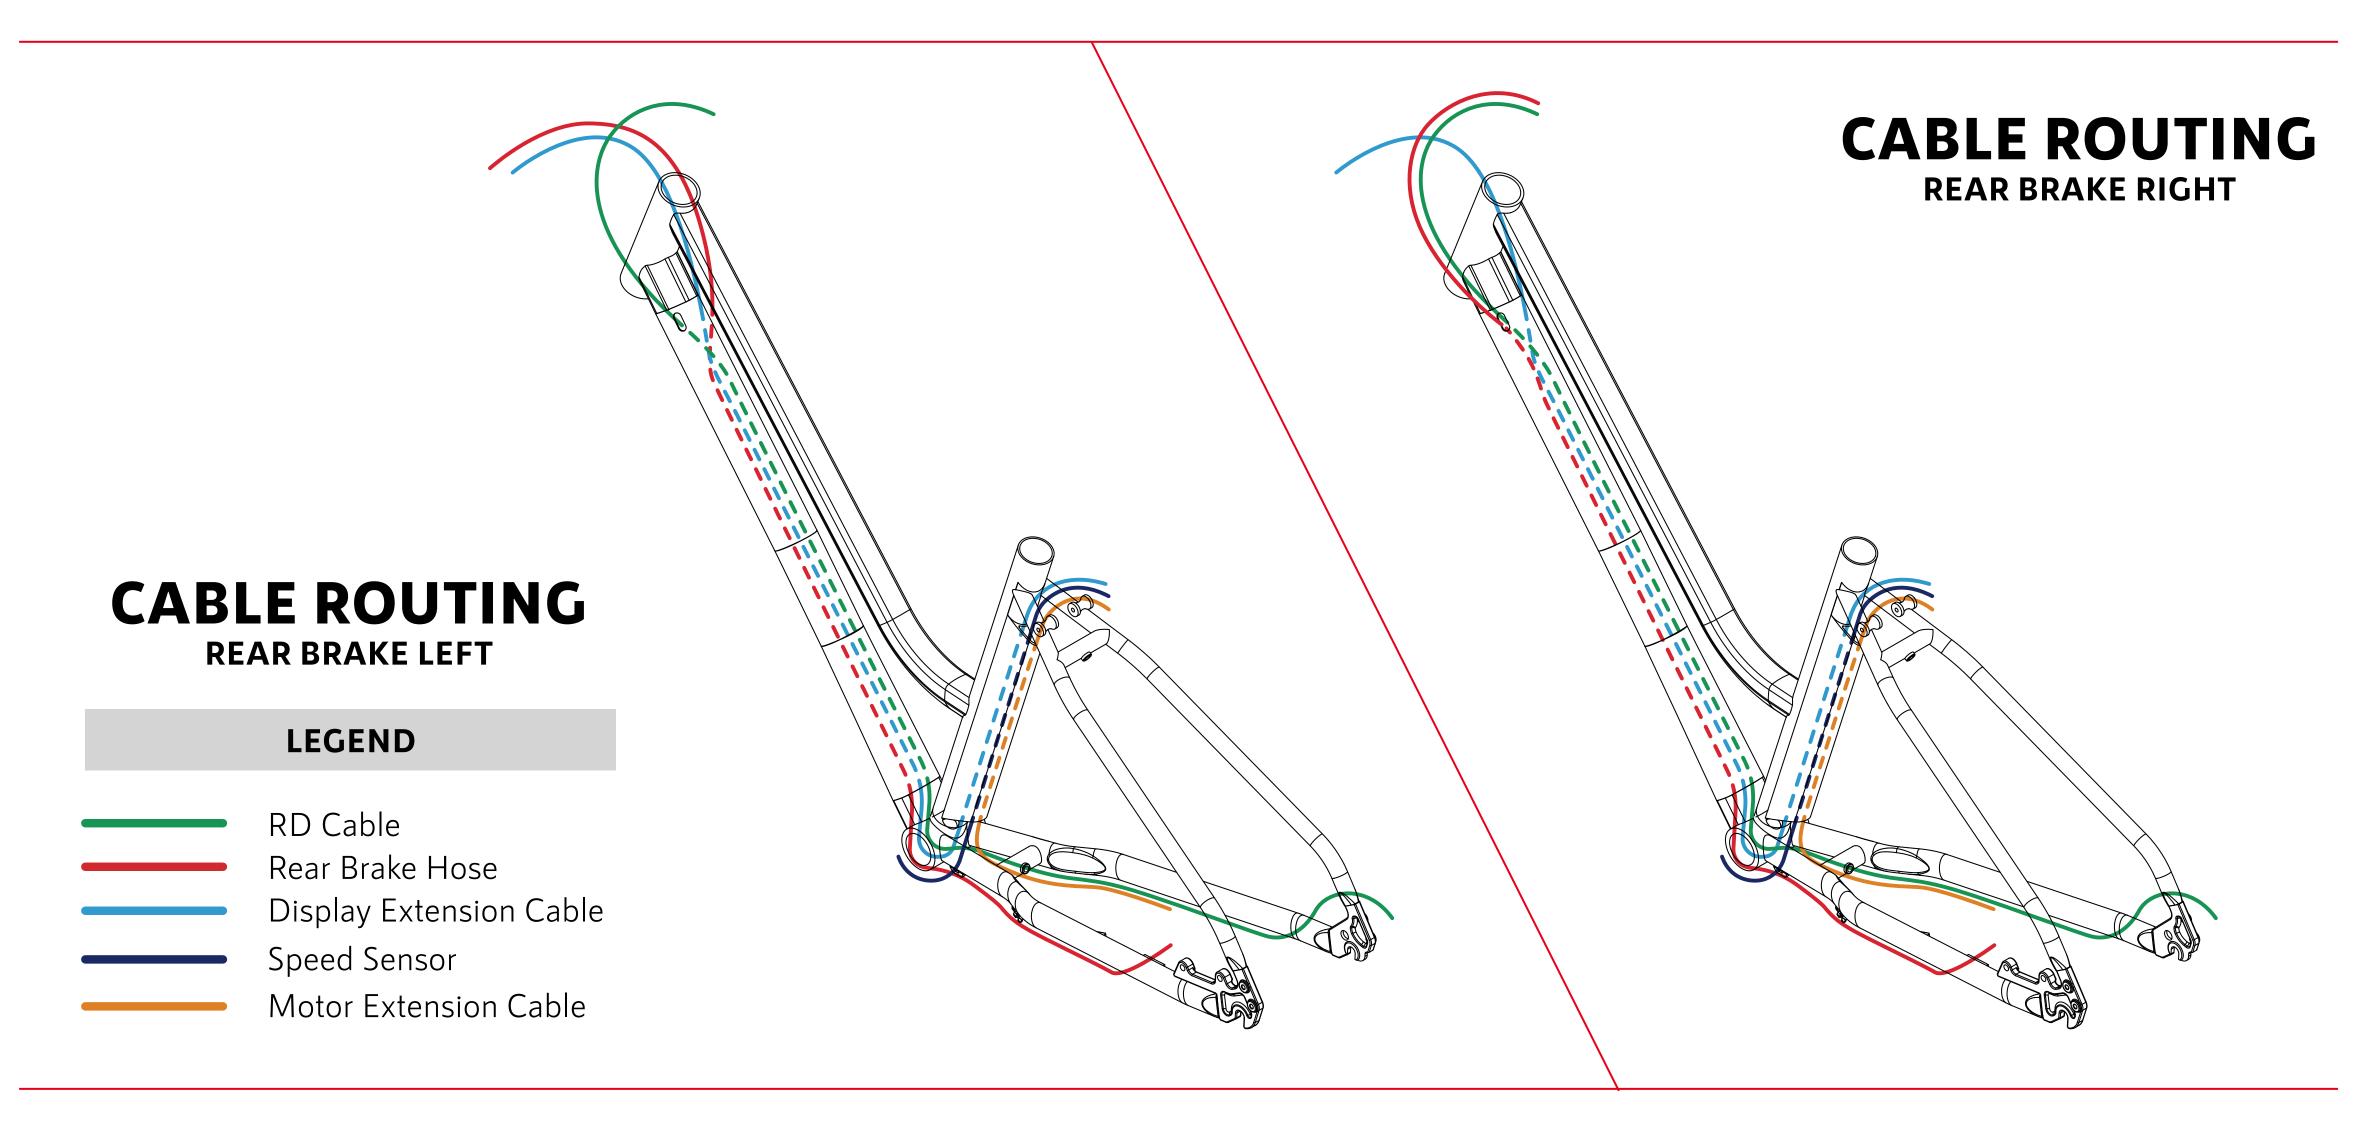

04 / Cable Routing





KALOSI CRUISE E-BIKE PARTS


ARTICLE CODE	PART #	ITEM	ITEM DETAILS	TORQUE (N.m)	QTY / FRAME	SOLD
737008	-	DISPLAY	HMI DP E12CA 36V L:230 COMPT H400B	0,5	1	PER PIECE
737005	-	DISPLAY EXTENSION CABLE	EB 1T1.J6 1650mm cable	-	1	PER PIECE
735132	-	CONTROLLER	CR S104.250.FC	-	1	PER PIECE
737009	-	BATTERY MOUNT SLIDER	YT30074SL FOR YT30074 W/ CONTROL BOX	-	1	PER PIECE
737007	-	BATTERY	YT30074 36V 10.4AH HARD BMS	-	1	PER PIECE
737019	-	REAR CARRIER	FME0006L FOR BATTERY MOUNT	-	1	PER PIECE
737011	-	SPEED SENSOR	SRPA051.12.S1.0 850mm C.BUS	-	1	PER PIECE
737012	-	REAR WHEEL KALOSI CRUISE W/ MOTOR	26" RM G020.250.DC 138mm O.L.D.	47-60	1	PER PIECE
736995	-	REAR MOTOR EXTENSION CABLE	EB 1T1.FX.550 9PIN L:550mm	-	1	PER PIECE
736216	-	FREEHUB BODY	FOR ALL REAR HUB MOTOR H400B	-	1	PER PIECE
737010	-	CHARGER	YT-420200E W/O POWER PLUG	-	1	PER PIECE
737006	-	CHARGING CABLE	110-240V C7 TYPE C	-	1	PER PIECE
733072	-	DROPOUT DA	_	6-9	1	PER PIECE
736512	-	HEAD TUBE RUBBER GROMMET	SINGLE HOLE & DOUBLE HOLE	-	2	AS A SET

05 / E-Bike Parts







DISPLAY

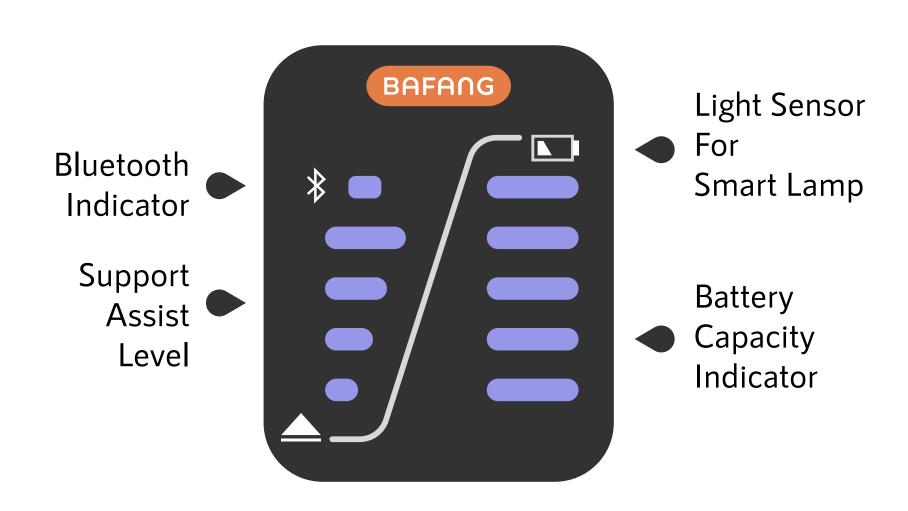



TURN ON THE SYSTEM

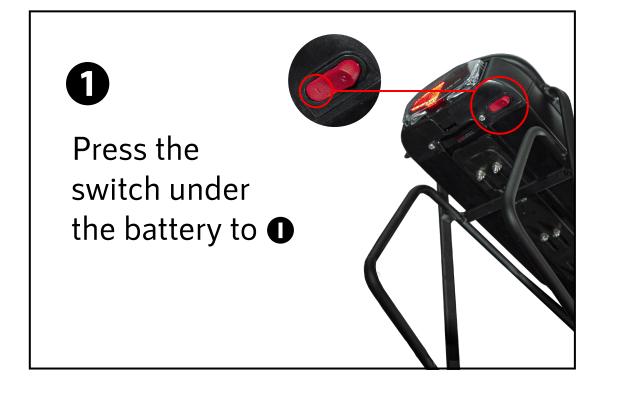

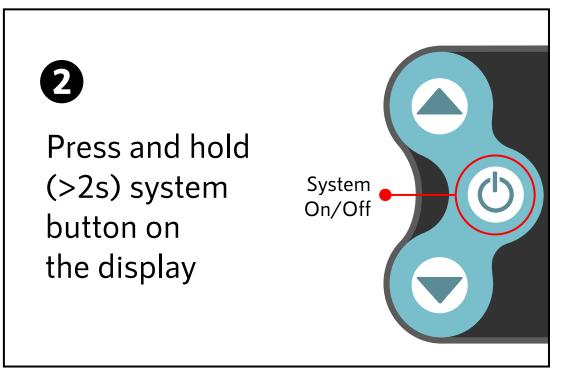

TURN OFF THE SYSTEM

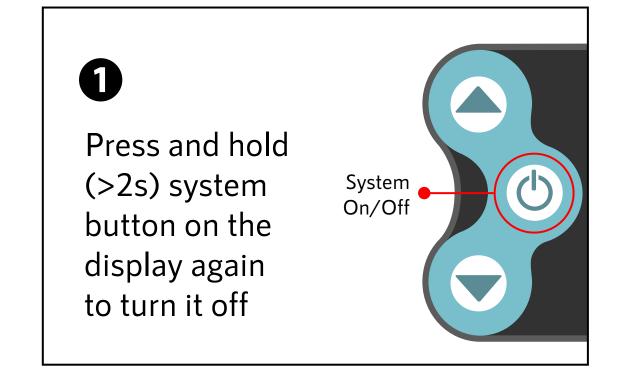

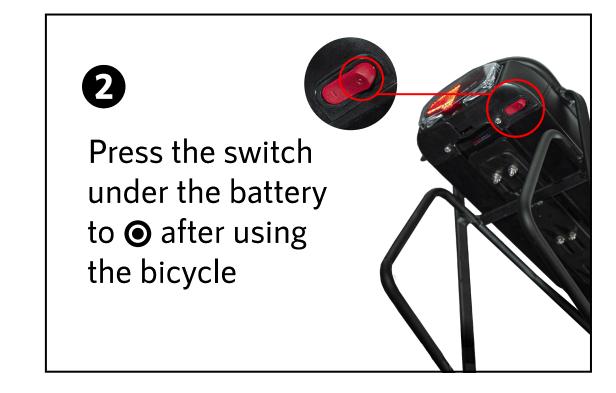

06 / Display, Turn On/Off The System Manual Guide






PEDELEC/ASSIST SUPPORT VARIATIONS

When the display is turned on, press the + or - button on the display to switch the support level. Pedelec will work only if you pedal your bicycle.

The lowest level is 0 and the highest level is 4. The pedelec will be active if it is turned on level 1. Level 0 of assist will give no support to your pedaling.

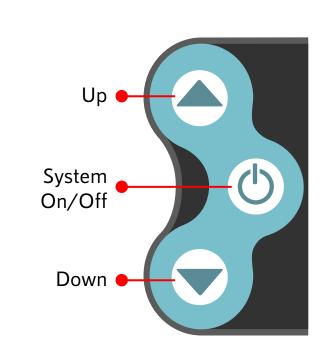

DISPLAY	DETAILS
0	No pedal assistance
1	25% of maximum power
2	50% of maximum power
3	75% of maximum power
4	100% of maximum power



WALK MODE

- 1 Make sure assist level position is at 0.
- **2** Press and hold (>2s) down button (\checkmark) of the display assist .
- 3 After entering the walk mode, press and hold again the down button (♠) to start walk mode assist.

AUTOMATIC SMART LAMP

- 1 When the e-bike system is turned on, the lamp will come into automatic mode. In this mode, the lamp will automatically turn on in the dark area and off in the bright area.
- Press and hold (>2s) the up button (▲) of the display assist to switch into the manual mode. When move to the manual mode, the lamp will change from the automatic mode:
 - If during automatic mode the light is on, after switching to manual mode the light will turn off.
 - If during automatic mode the light is off, after switching to manual mode the light will turn on
- In the manual mode, press and hold (>2s) the up button to turn the lamp on/off.
- To return to automatic mode, the e-bike system needs to be restarted.

07 / Pedelec & Assist Support Manual Guide







BATTERY INSTALLATION

1 Insert the battery


Make sure the key is in the unlocked position by rotating the key counterclockwise until it stops. Slide the battery onto the battery mount slider in the rear carrier.

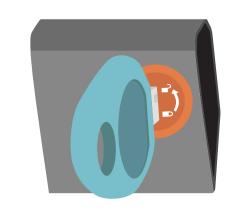

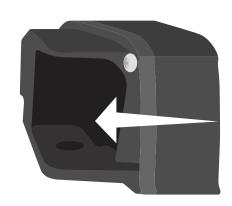

2 Lock the battery


Install the battery properly, and then turn the key clockwise to lock the battery.

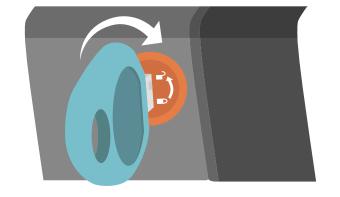

3 Remove the key


BATTERY REMOVAL


- **1** Turn the power off
- Insert the key
 Insert the key and
 turn it counterclockwise
 to unlock the battery.

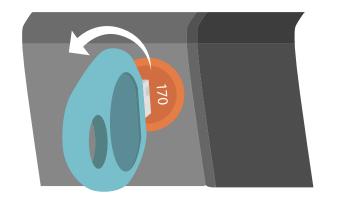

3 Release the battery

Release by pulling the battery away from the battery mount.

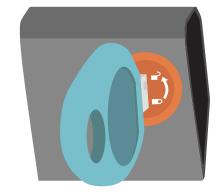

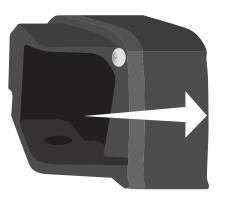


08 / Battery





CHARGING THE BATTERY

- 1 Connect the battery charger's power plug to the electrical outlet.
- 2 Open the charging port cover.
- 3 Insert the charging plug into the charging port on the battery.

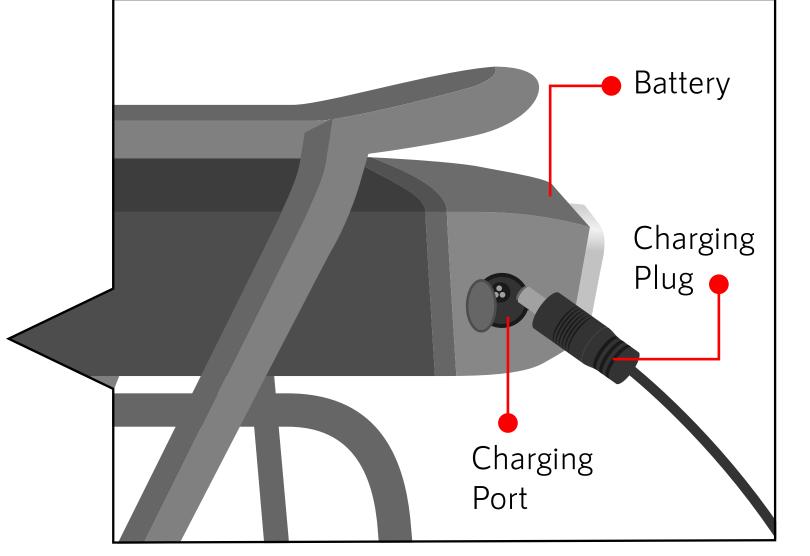

BATTERY CAPACITY

36V 10.4Ah

CHARGING TIME


4-6 hours

09 / Battery





BATTERY LED INDICATOR

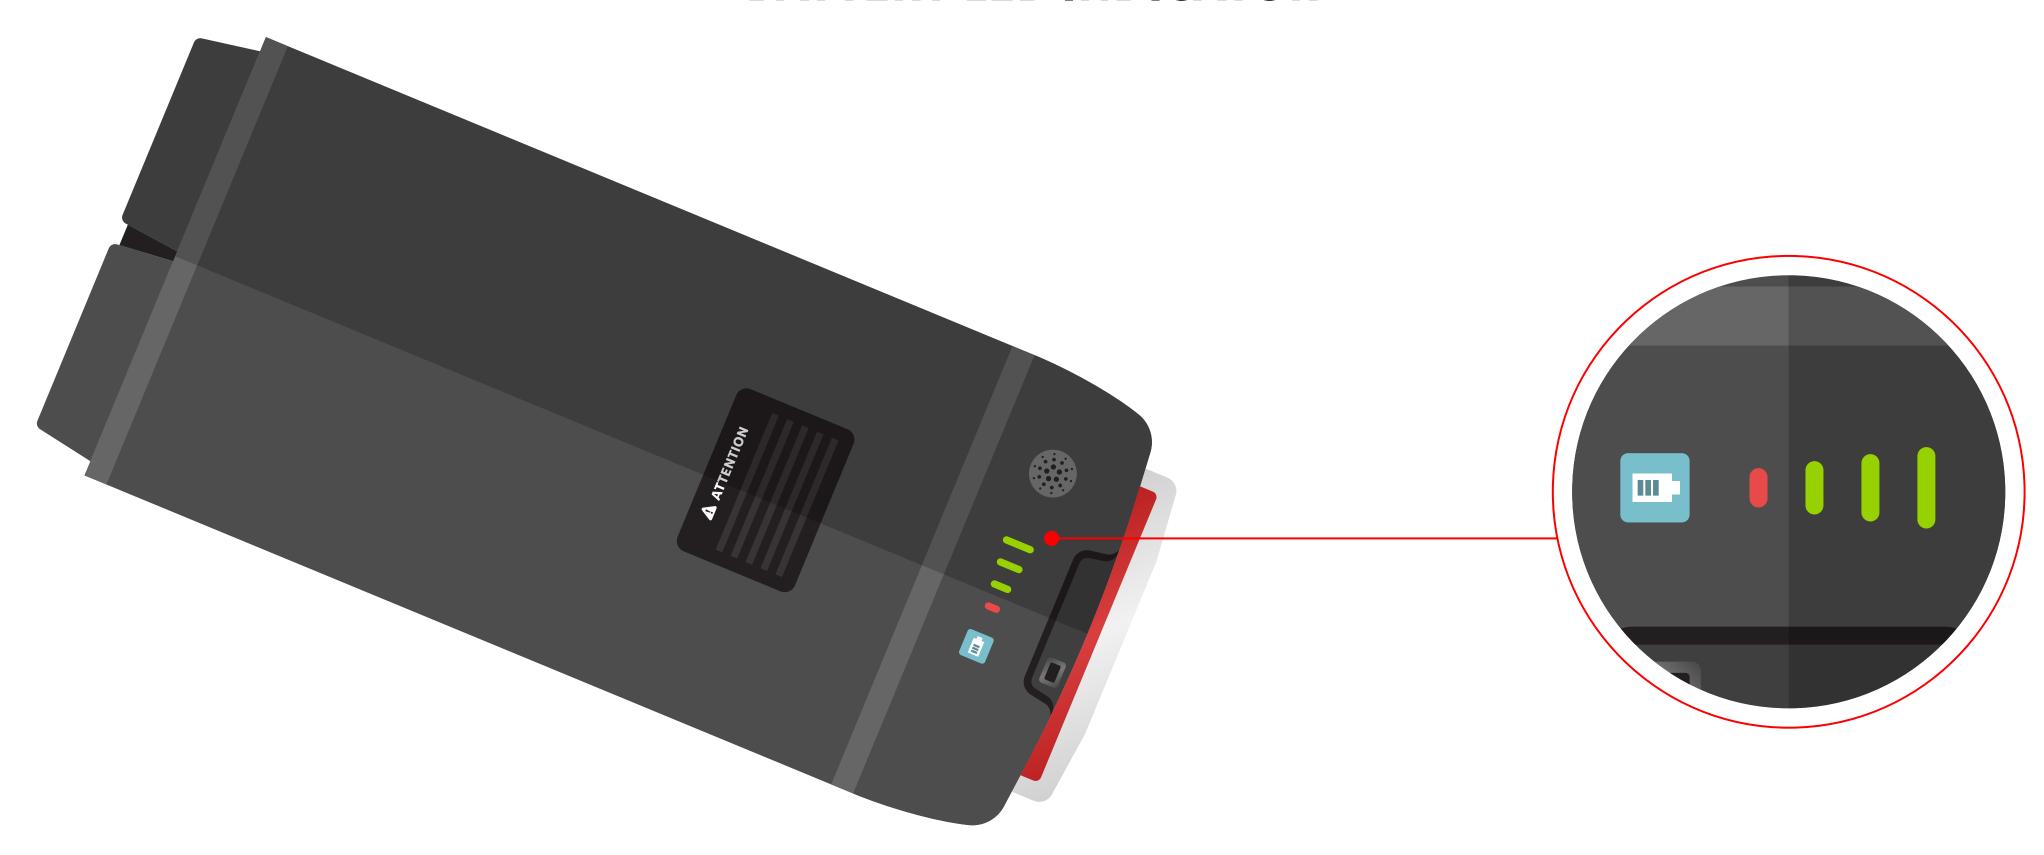

10 / Battery LED Indicator